

## Assembly guide for Tornado

Always visually inspect parts before assembling. This guide presumes that filters are new, batteries are charged, and that parts are clean and dry.



1. Connect a fully charged battery to the blower unit, sliding it into place.



2. Screw a compatible P3 filter onto the unit until you hear a 'snap'.



3. Thread the belt strap through the slits on the back of the unit as shown.



4. Slide the belt hoop onto the thin end of the strap.



5. Thread the buckle onto the strap from back to front.




6. Connect one end of the hose to the blower unit.



7. On the other end of the hose, place a clear plastic washer.



8. Push the hose end through the hole in the back of the hood.

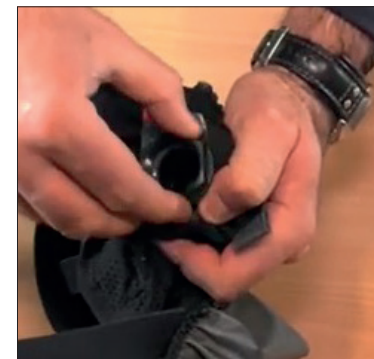

9. Place the second washer over the hose end and fasten endcap on top.

**Do not enter the contaminated area until your Tornado powered air purifying respirator unit has been donned.**